

# Installation Manual

SEAT ALTEA XL 5DR  
SEA-ALXL-5-A



## COMPONENTS INCLUDED



X2



X2



X2



CL-M02 x 6



CL-M09 x 4



# Installation



SEAT ALTEA XL 5DR  
SEA-ALXL-5-A



## SIDE SHADE INSTALLATION



x2

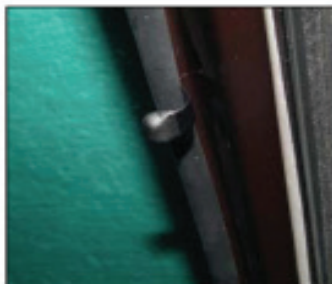
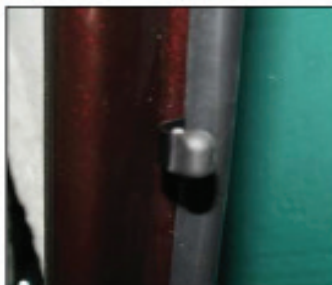


# Installation

SEAT ALTEA XL 5DR  
SEA-ALXL-5-A



## SIDE SHADE INSTALLATION

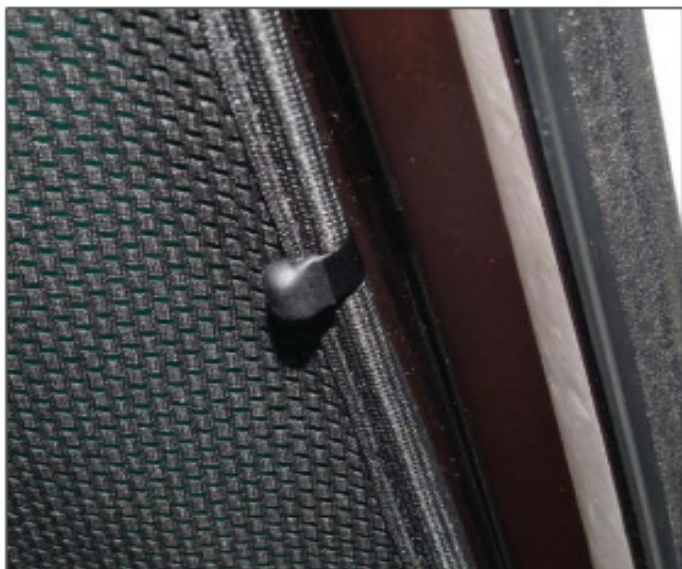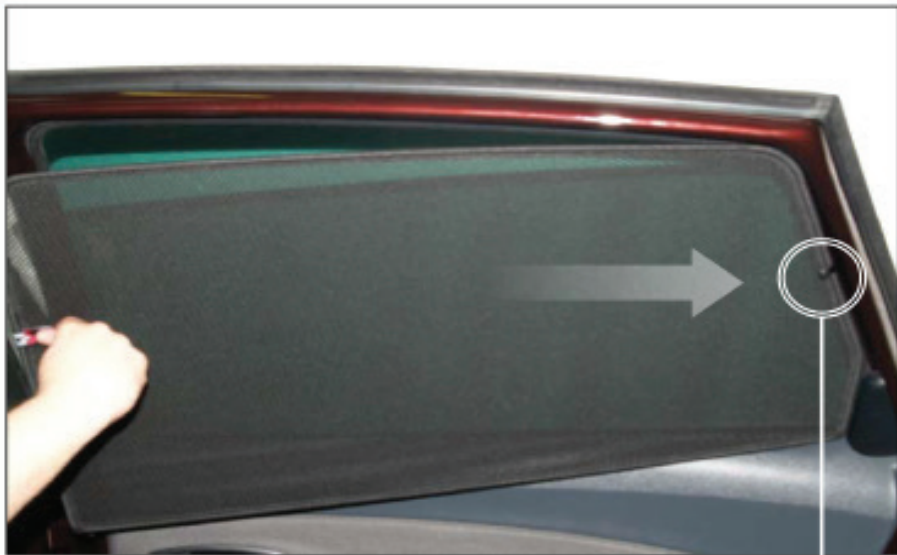


# Installation

SEAT ALTEA XL 5DR  
SEA-ALXL-5-A



## SIDE SHADE INSTALLATION

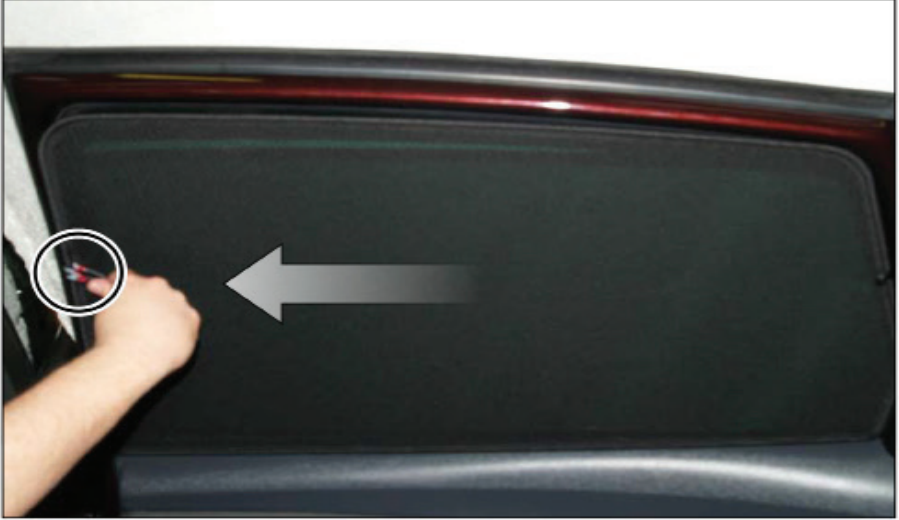

X2

# Installation

SEAT ALTEA XL 5DR  
SEA-ALXL-5-A



## LOAD AREA SHADE INSTALLATION




# Installation

SEAT ALTEA XL 5DR

SEA-ALXL-5-A



## LOAD AREA SHADE INSTALLATION

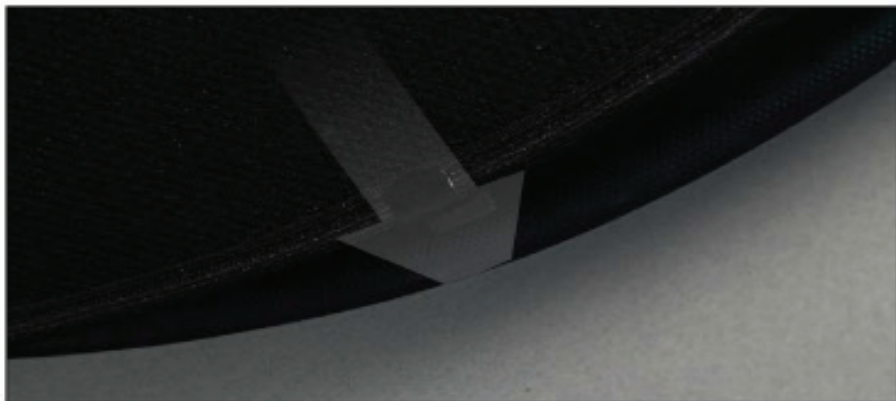


# Installation

SEAT ALTEA XL 5DR  
SEA-ALXL-5-A



## LOAD AREA SHADE INSTALLATION

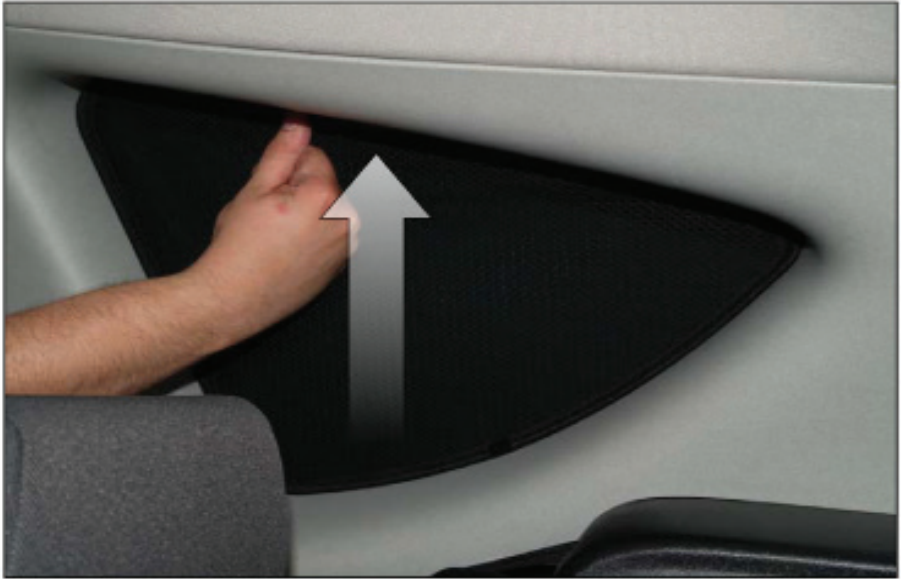

x2


# Installation

SEAT ALTEA XL 5DR  
SEA-ALXL-5-A

## REAR SHADE INSTALLATION



X2

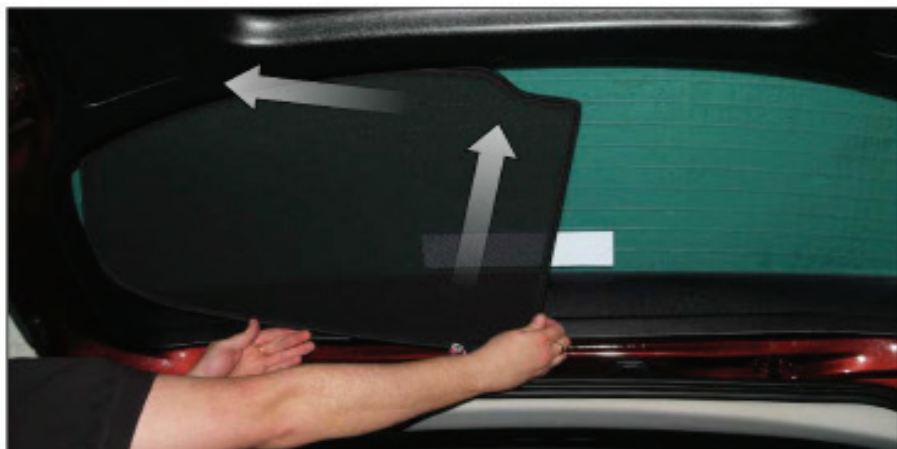





# Installation

SEAT ALTEA XL 5DR

SEA-ALXL-5-A



## REAR SHADE INSTALLATION

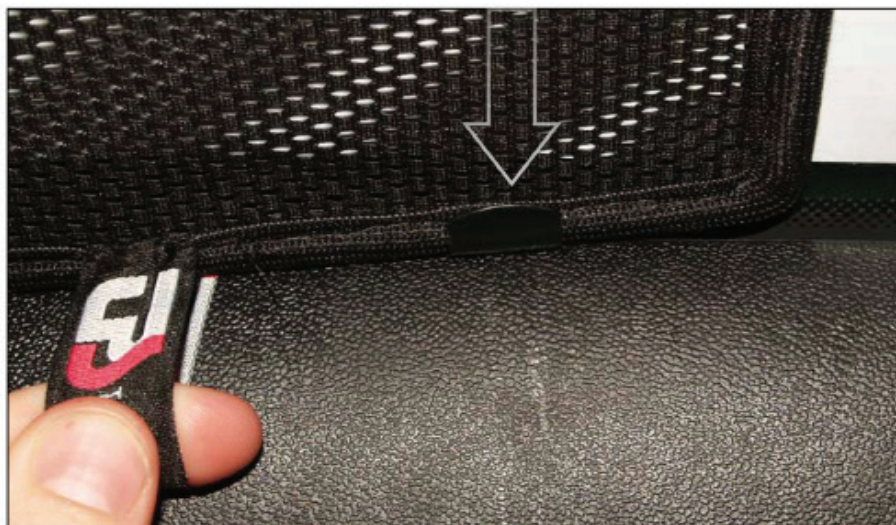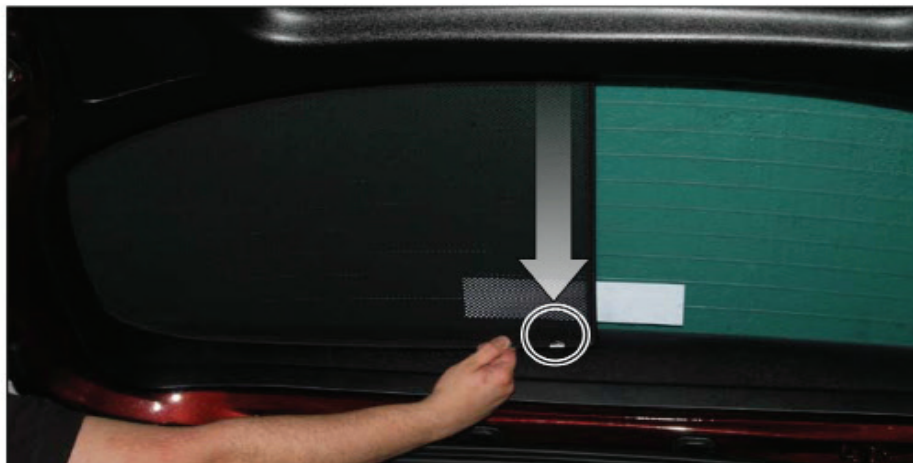

# Installation

SEAT ALTEA XL 5DR  
SEA-ALXL-5-A



## REAR SHADE INSTALLATION

